




**ADVENTURE
FURTHER®**

FLEX ERA 3 FOG LIGHT MOUNT
07-17 JEEP JK, 18-CUR JEEP JL WRANGER | JT GLADIATOR
FOR FACTORY STEEL BUMPER - #7473, #97149

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.

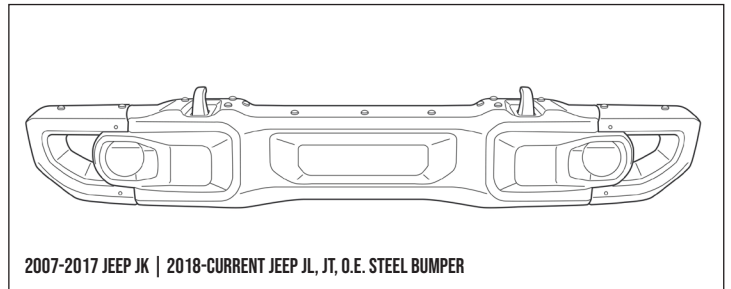

2007-2017 JEEP JK | 2018-CURRENT JEEP JL, JT, O.E. STEEL BUMPER

ASSEMBLY INSTRUCTIONS

TOOLS NEEDED:
METRIC ALLEN KEY SET

- 1** POSITION LOCK WASHER
- 2** POSITION BRACKET
- 3** POSITION HARDWARE
- 4** START WITH WASHERS
- 5** LOOSELY TIGHTEN SCREWS FOR FINAL PITCH ADJUSTMENT
- 6** WITH THE MOUNTING BRACKET TAB POINTING BACKWARDS, POSITION THE LIGHT ASSEMBLY INTO THE FRONT SLOTTED HOLE.
- 7** POSITION HARDWARE
- 8** AFFIX THE LIGHT INTO PLACE USING THE SUPPLIED HARDWARE
- 9** POSITION THE SHROUDS SO THAT THE TRIANGULAR OPENING MATCHES THE FRONT PROFILE OF THE LIGHT AND INSTALL
- 10** (PASSENGER SIDE) (DRIVER SIDE)
READY FOR FINAL INSTALLATION!

LIGHT INSTALLATION INSTRUCTIONS

TOOLS NEEDED:
PHILIPS SCREWDRIVER

1. USING THE FACTORY HARDWARE, SIMPLY ALIGN THE FOG LIGHT AND FIX INTO POSITION.
2. WITH THE FOG LIGHT ASSEMBLY INSTALLED, USING THE LIGHT MOUNTING SCREWS, FIND THE DESIRED PITCH ANGLE AND FIRMLY SECURE THE LIGHT IN PLACE.

HARNESS ADAPTER INSTALL - #30546

3127CA HARNESS FOR HIGH POWER MODE

(2) #30546 OEM HARNESS ADAPTERS

OEM (H16) DRIVER

OEM (H16) PASSENGER