



**ADVENTURE
FURTHER®**


17+ CANAM X3 - SHOCK TOWER MOUNT
FOR PART NUMBER: 10-00018-01 BKT, SHOCK TOWER, CANAM X3

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



INSTALLATION INSTRUCTIONS: (FOR STANDARD 10" LIGHT BARS, SHOWN WITH 10" FLEX ERA BAR)

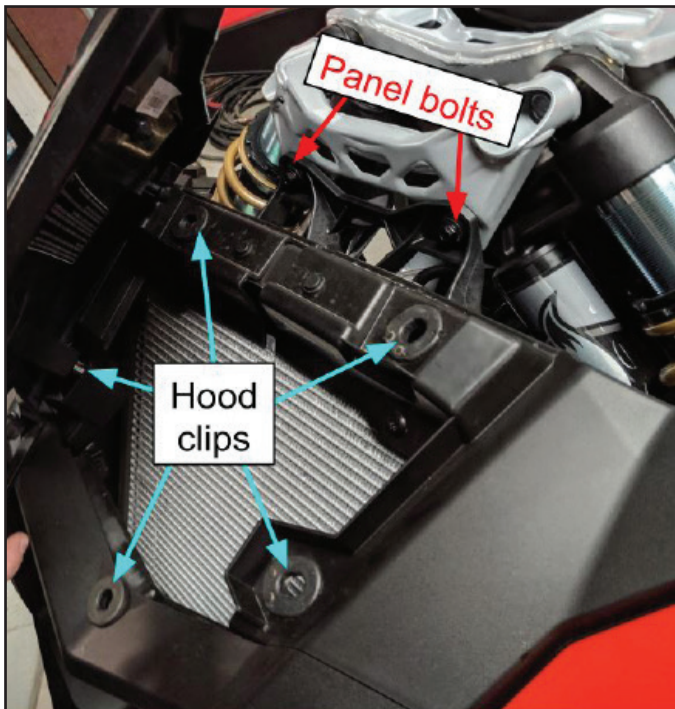

Remove Hood Clips and Panel Bolts

1. Remove the hood (*The hood is held in place with the five retainer clips.*)
2. Using a socket tool (or wrench), remove the two upper bolts in the radiator panel. (*Use slow and even pressure to remove the bolts to avoid damaging the hardware.*)
3. Set the bolts aside. (*They will be used for the next step.*)

Installing Shock Tower Mount Bracket

1. Place the bracket between the plastic radiator brace and the shock tower brace.
2. When reinstalling the original panel fasteners, place the bolts through the plastic radiator brace and the KC Can-Am shock tower mount - into the shock tower brace.
3. Torque the bolts back to factory specifications.