




**ADVENTURE
FURTHER®**

**CHASE LIGHT MOUNT
18-23 JEEP JL WRANGLER (HARDTOP)
#98013 | 59-00181-01**

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.

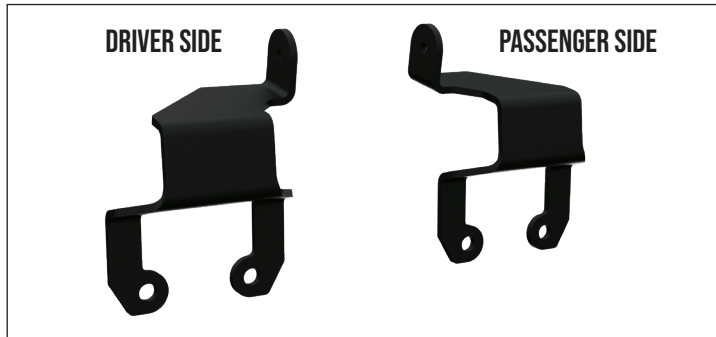

PREP INSTRUCTIONS

TOOLS NEEDED:
PANEL REMOVER & M10
SOCKET/WRENCH

BRACKET INSTALLATION



LOCATE LIFT GLASS HINGE COVERS. CAREFULLY REMOVE COVERS USING A PANEL REMOVAL TOOL OR FLATHEAD SCREWDRIVER.



POSITION THE APPROPRIATE CHASE LIGHT BRACKET OVER FACTORY HINGE FLANGE AND RE-ASSEMBLE USING FACTORY HARDWARE.



USING M10 SOCKET, REMOVE THE FACTORY HINGE BOLTS. MAKE SURE TO ONLY DO ONE SIDE AT A TIME, TO ENSURE THE LIFT GLASS DOES NOT FALL OUT OF ALIGNMENT.



RE-INSTALL FACTORY LIFT GLASS COVER AND REPEAT INSTALLATION OF BRACKET ON OTHER SIDE.