



**ADVENTURE
FURTHER®**


**HEADLIGHT FUNCTION ADAPTER HARNESS
2018+ JEEP WRANGLER JL & JT
59-00074IM**

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



TOOLS NEEDED: WIRE CRIMPERS

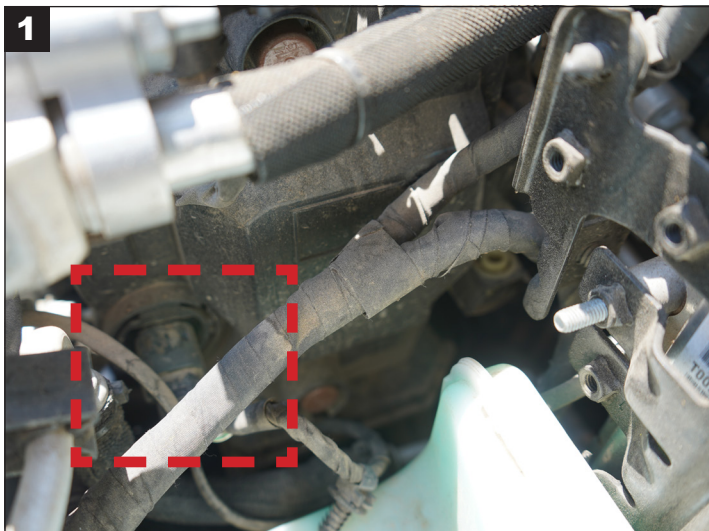

1 LOCATE YOUR FACTORY HEADLIGHT CONNECTOR ON THE BACK OF YOUR HEADLIGHT. IT CAN BE DRIVER OR PASSENGER SIDE. DRIVER SIDE IS SHOWN ABOVE.


2 UNPLUG THE CONNECTOR AND ATTACH THE ADAPTER HARNESS IN LINE. MAKE SURE TO RECONNECT THE CONNECTORS FIRMLY AND ENGAGE THE LOCKING TABS.

INSTALLATION INSTRUCTIONS



3
RUN THE PIGTAIL EXTENSIONS TO WHEREVER DESIRED. REFER TO THE FUNCTIONS OF EACH WIRE COLOR AND WIRE IT APPROPRIATELY TO YOUR SYSTEM. THIS HARNESS IS DESIGNED TO TRIGGER A RELAY ONLY, NOT POWER A SOURCE DIRECTLY.

THIS NEXT PART OF THE INSTALL IS OPTIONAL AND IS NOT A REPRESENTATION OF WHAT IS INCLUDED WITH THE ADAPTER HARNESS. THIS HARNESS PAIRS WELL WITH OUR JEEP JL & JT FACTORY BUMPER FOG LIGHT KITS

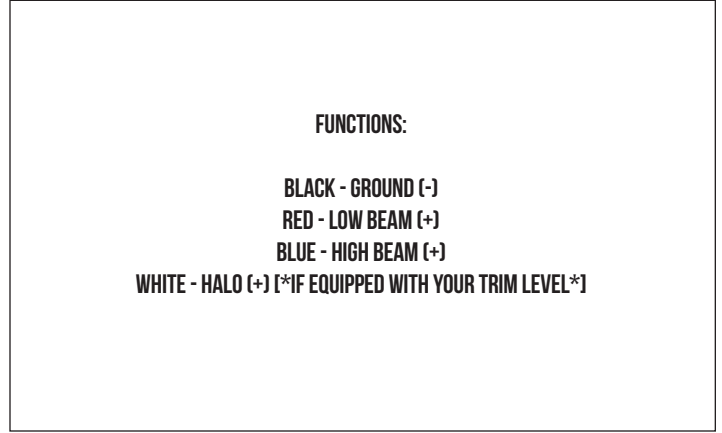

FUNCTIONS:

BLACK - GROUND (-)
RED - LOW BEAM (+)
BLUE - HIGH BEAM (+)
WHITE - HALO (+) [*IF EQUIPPED WITH YOUR TRIM LEVEL*]



1
ONCE YOUR LIGHTS ARE INSTALLED. LOCATE THE GREEN WIRE ON THE HARNESS INCLUDED WITH YOUR FE3 SAE KIT.



2
WITH THE GREEN WIRE LOCATED, GO AHEAD AND CRIMP THIS TO THE BLUE PRE-INSTALLED BUTT CONNECTOR ON YOUR NEWLY PURCHASED HARNESS. YOU CAN CHOOSE A DIFFERENT FEATURE TO TRIGGER THE OFF ROAD MODE IF DESIRED.



3
YOUR INSTALLATION FOR THIS SETUP IS COMPLETE. THE FUNCTION BEHIND THE ADAPTER HARNESS IS THAT THE FOG MODE WILL TURN ON WITH YOUR FACTORY FOG SWITCH. THE OFF ROAD MODE WILL TURN ON WITH YOUR HIGH BEAMS, BY USING THE HIGH BEAM 12V+ SIGNAL AS A TRIGGER.