



**ADVENTURE
FURTHER®**

**FE1 BACKUP KIT
2024+ CAN AM MAVERICK R
59-00244IM**

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



TOOLS NEEDED: DRILL, DRILL BIT SET, 17MM WRENCH, METRIC HEX BITS




REMOVE THE BRACKET FROM YOUR FLEX ERA 1 LIGHT AND REPLACE THE ORIGINAL CARRIAGE BOLT WITH THE PROVIDED LONGER CARRIAGE BOLT AND SPACER. RETAIN THE WASHERS AND NUTS AS THESE WILL BE USED LATER.



(OPTIONAL): IF YOU INTEND TO USE THE SPREAD OPTIC, IT WOULD BE A GOOD IDEA TO CLOCK THE LENS TO THE SIDE MOUNTING CONFIGURATION AT THIS TIME. SEE THE FLEX ERA 1 INSTRUCTION MANUAL FOR DETAILS.



INSTALLATION INSTRUCTIONS

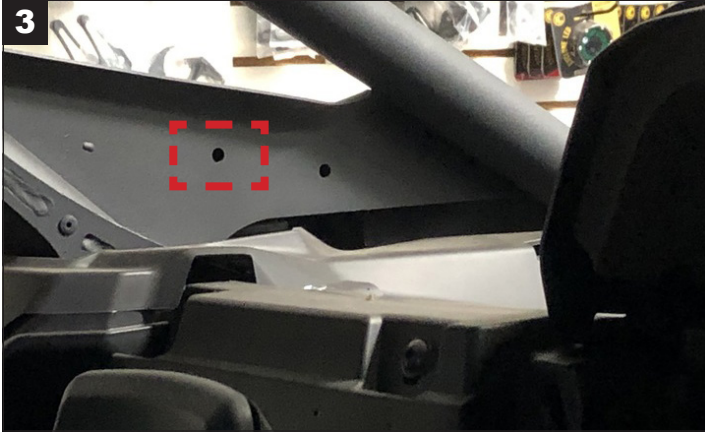

DRILL THE HOLE IN THE SIDE OF THE CAGE TO ACCEPT A 10MM BOLT. THE HIGHLIGHTED HOLE IS THE PREFERRED MOUNTING POSITION.



INSTALL THE LIGHT WITH THE LIGHT AND SPACER POSITIONED INSIDE OF THE CAGE, AND DON'T FORGET TO CLOCK THE COVER TO YOUR DESIRED ORIENTATION.

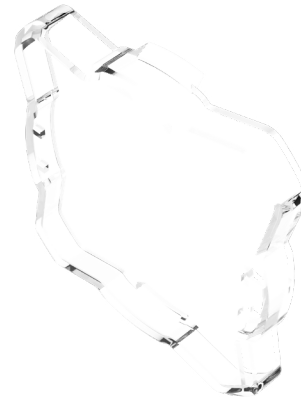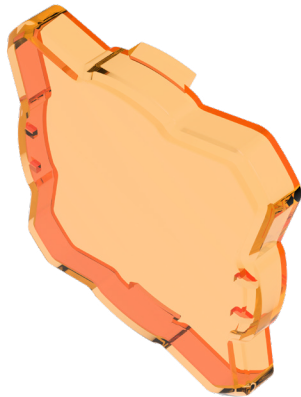

BE SURE TO CHECK OUT OUR FULL RANGE OF FLEX ERA 1 ACCESSORIES TO HELP YOU ADVENTURE FURTHER!

