



**ADVENTURE  
FURTHER®**

**10" FE BAR SHOCK TOWER MOUNT  
2024+ CAN-AM MAVERICK R  
59-00224IM**

## INSTALLATION INSTRUCTIONS


**IMPORTANT:** Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



**TOOLS NEEDED: METRIC HEX BITS, METRIC WRENCH OR SOCKET SET, PLASTIC TRIMMING TOOL (OPTIONAL)**



**1** REMOVE THE FACTORY HOOD SCOOP TRIM FROM THE VEHICLE BY GENTLY PULLING THE BRACKET UP AT THE BACK TO RELEASE FOUR CLIP LOCATIONS. THEN, SLIDE THE TRIM PIECE FORWARD TO REMOVE COMPLETELY.

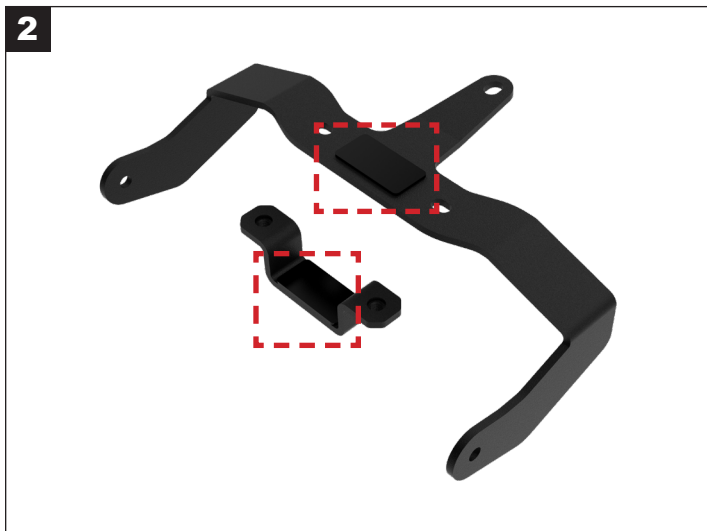

**2** PRE-INSTALL RUBBER SHIM MATERIAL AS SHOWN ON THE FACES OF THE BRACKETS THAT WILL CONTACT THE VEHICLE FRAME.

# INSTALLATION INSTRUCTIONS

3



INSTALL THE SPACERS AND BOLTS ON THE TOP BRACKET AS SHOWN THEN INSTALL THE O-RING ON THE END OF THE BOLT TO HOLD THE SPACERS IN PLACE WHILE COMPLETING THE INSTALL.

4



HOLD THE LOWER CLAMP BRACKET UNDERNEATH THE TUBE IN FRONT OF THE SHOCK MOUNTING POINTS. IN SOME INSTANCES, IT MAY BE EASIER TO HOLD THIS BRACKET FROM INSIDE THE WHEEL WHEEL RATHER THAN FROM THE TOP SIDE OF THE VEHICLE.

5



LOOSELY START BOTH BOLTS FROM THE MAIN BRACKET INTO THE THREADED HOLES ON THE LOWER CLAMP BRACKET. ONCE THE BOLTS ARE STARTED YOU CAN LET GO OF THE LOWER CLAMP BRACKET.

6




INSTALL THE PROVIDED PLASTIC FASTENER IN THE REAR MOST MOUNTING HOLE ON THE MAIN BRACKET AND TIGHTEN THE TWO MOUNTING BOLTS.

7



REINSTALL THE FACTORY HOOD SCOOP TRIM. MINOR TRIMMING MAY BE REQUIRED TO ACHIEVE A GOOD FIT.

8

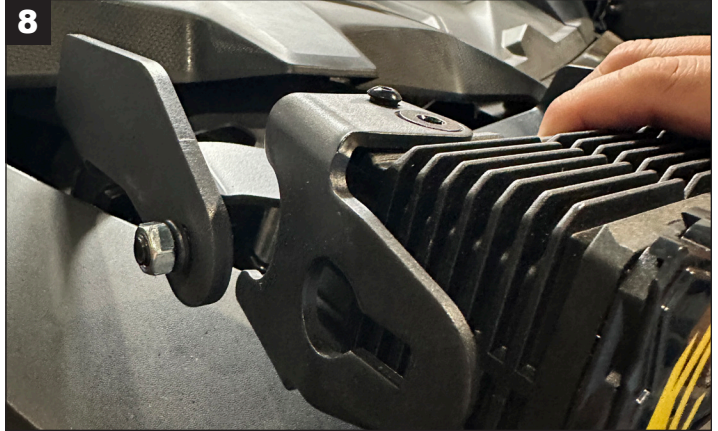

INSTALL YOUR FE BAR USING THE TWO END MOUNT SCREWS.