




**ADVENTURE
FURTHER®**



**CHASE LIGHT MOUNT
PL1
92503 | 59-00299IM**

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.

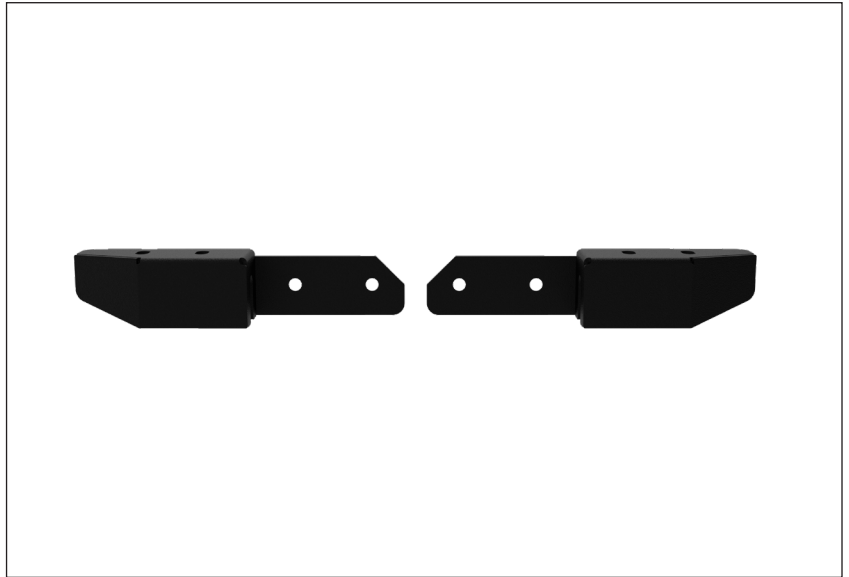

TOOLS NEEDED: 13MM SOCKET AND WRENCH SET, METRIC AND IMPERIAL ALLEN KEY SET, PRECISION SCREWDRIVER SET

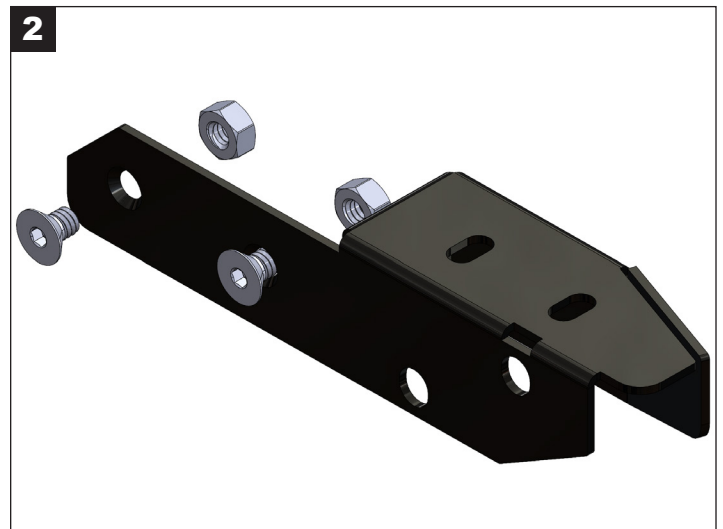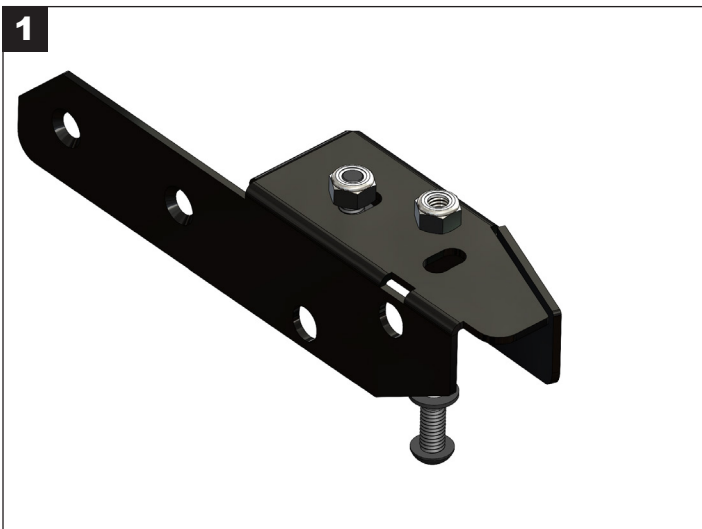


THIS BRACKET IS DESIGNED TO ACCEPT THE KC 28" CHASE LIGHT (9801). THE BRACKET CAN EITHER BE FLUSH MOUNTED TO THE REAR EXTRUSION FACE. OR MOUNTED ON THE BOTTOM OF THE REAR EXTRUSION.

THE BRACKETS WILL BE ATTACHED TO THE CHASE LIGHT BY UTILIZING THE COUNTERSUNK 1/4"-20 BOLTS AND NON LOCKING 1/4"-20 NUTS. REMOVE ONE END CAP OF THE CHASE LIGHT AND SLIDE 4 NUTS INTO THE CHANNEL. WE RECOMMEND USING BLUE LOCTITE.


INSTALLATION INSTRUCTIONS

3

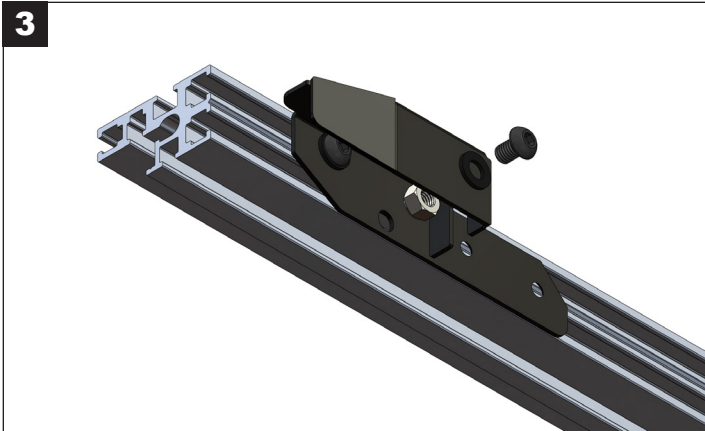

FOR FLUSH MOUNTING: SLIDE FOUR M8 NUTS INTO THE EXTRUSION CHANNEL ON THE OUTER FACE. PLACE THE BRACKET AND LIGHT ASSEMBLY IN PLACE AND TIGHTEN WITH INCLUDED HARDWARE.

4

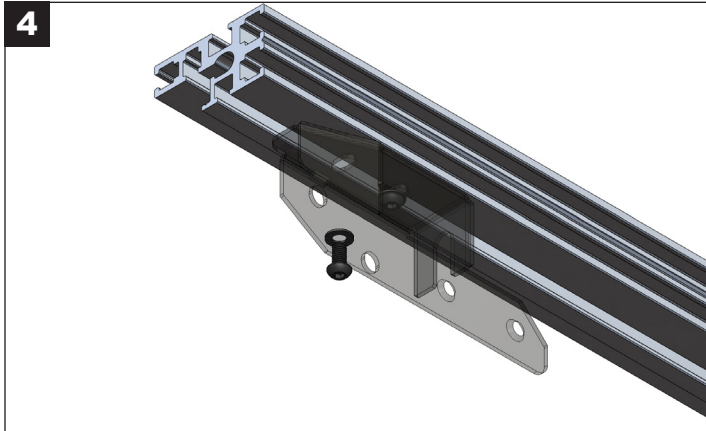

FOR BOTTOM MOUNTING: THERE ARE NO HARDWARE ENTRY POINTS ON THE LOWER M6 CHANNEL. THIS METHOD IS BEST UTILIZED WHEN THE RACK IS FIRST ASSEMBLED AND THE M6 NUTS ARE PRE INSTALLED.