



ADVENTURE
FURTHER®


FE1 SIDE MOUNT
PL1
92505 | 59-00296IM

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



TOOLS NEEDED: METRIC ALLEN KEY SET

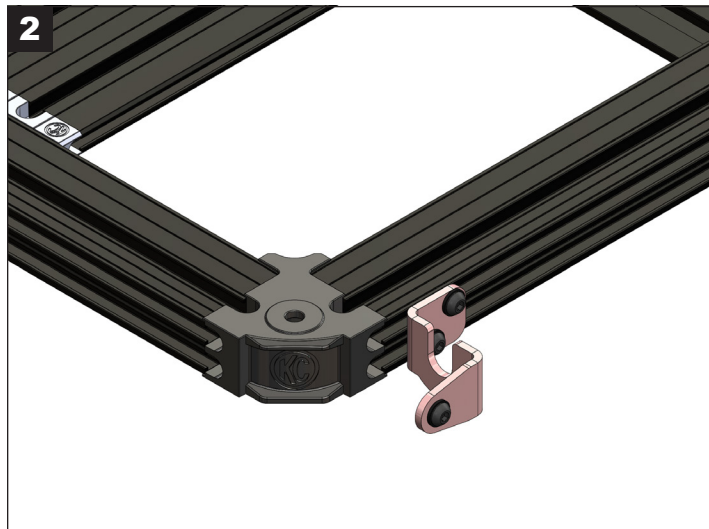

PRIOR TO STARTING INSTALLATION, PLEASE VERIFY THAT YOUR VEHICLE HAS ENOUGH CLEARANCE AND THAT THERE ARE NO POTENTIAL OBSTRUCTIONS. REVIEW THE DIMENSIONAL DRAWING FOR MEASUREMENTS.

THE BRACKETS ARE SIDE SPECIFIC. PLEASE REFER TO THE PART IMAGE TO DETERMINE ORIENTATION. RIGHT SIDE SHOWN.


INSTALLATION INSTRUCTIONS



START BY SLIDING THE M8 NUTS INTO THE EXTRUSION CHANNEL. PLACE THE BRACKET OVER THE NUTS AND FASTEN WITH THE INCLUDED M8 WASHERS AND BUTTON HEAD SCREWS.



TAKE YOUR FE1 AND PLACE THE THREADED BOSS ON THE LIGHT INTO THE CIRCULAR CUTOUT. AIM LIGHT AND FASTEN HARDWARE. ENSURE THAT THE REAR PIGTAIL HAS ENOUGH CLEARANCE.

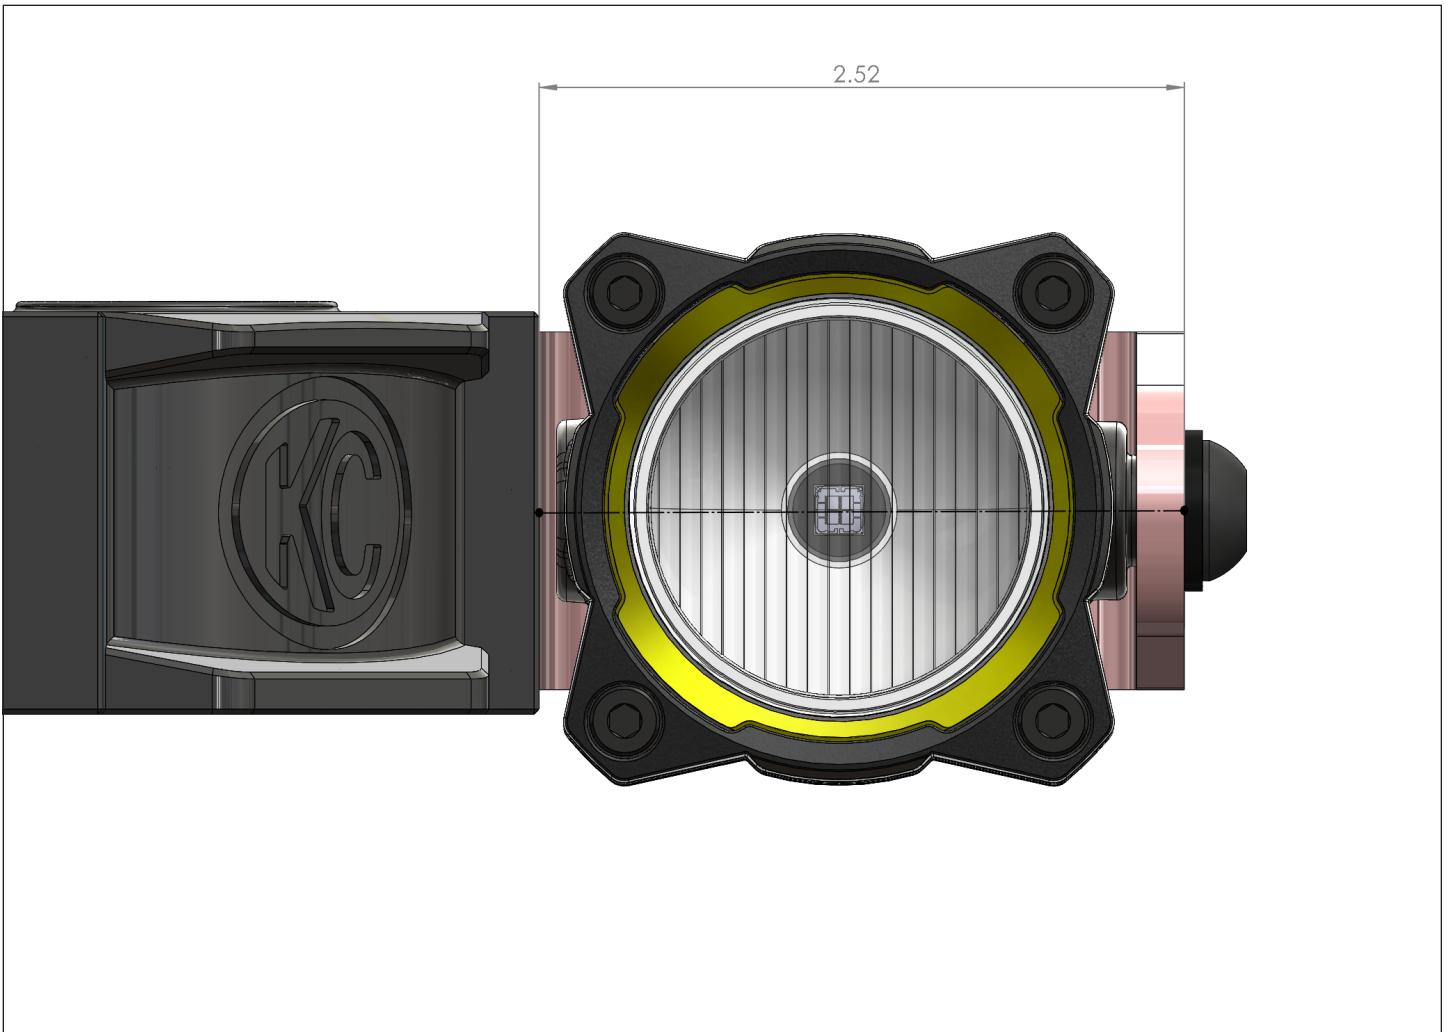

THESE MOUNTS WILL APPROXIMATELY ADD 2.5" OF WIDTH ON EITHER SIDE OF YOUR ROOF RACK