



ADVENTURE
FURTHER®

QUICKFIST MOUNTS

PL1

92508 & 92509 | 59-00291IM

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.




TOOLS NEEDED: 13MM WRENCH, METRIC ALLEN KEY SET

1




2

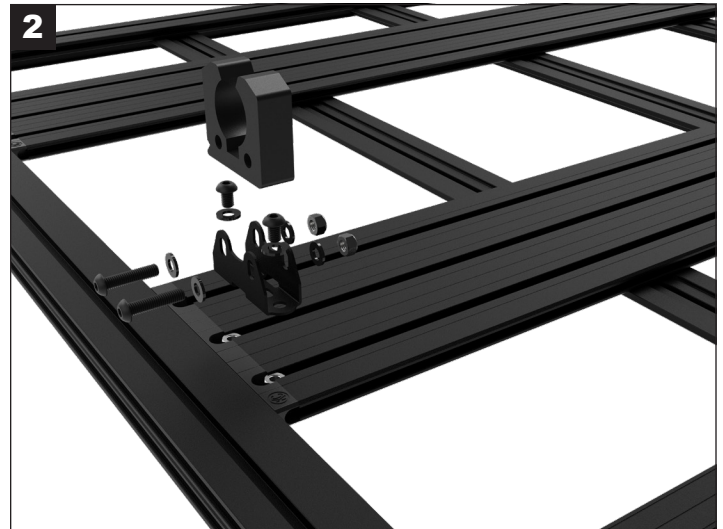


THESE INSTRUCTIONS WILL COVER THE INSTALLATION OF THE UNIVERSAL QUICKFIST MOUNT AS WELL AS THE 45 DEGREE QUICK FIST MOUNT. THESE BRACKETS ARE DESIGNED TO WORK WITH QUICKFIST #10010 WHICH ARE NOT INCLUDED.

FIND YOUR DESIRED LOCATION FOR INSTALLATION AND DROP TWO M8 NUTS INTO THE EXTRUSION CHANNEL. TAKE YOUR BRACKET AND LOCATE THE M8 NUTS. HAND TIGHTEN WITH THE INCLUDED M8 BUTTON HEAD SCREWS. TIGHTEN ONCE IN ITS FINAL POSITION.

INSTALLATION INSTRUCTIONS

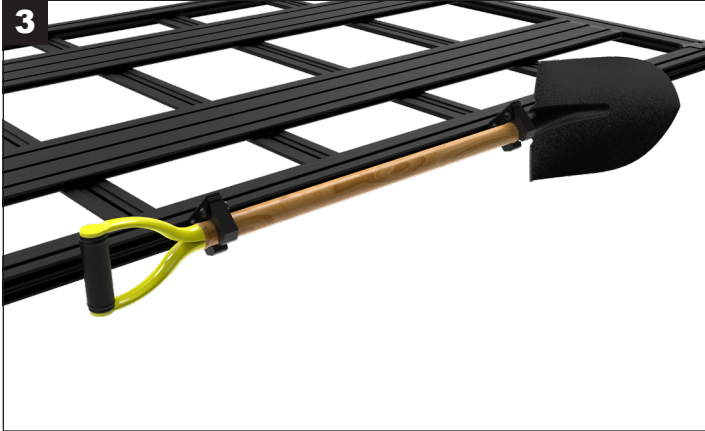


WITH THE SHEET METAL BRACKET IN PLACE, TAKE YOUR QUICKFIST (NOT INCLUDED WITH PURCHASE) AND PLACE IT IN POSITION. USE THE PROVIDED HARDWARE TO FASTEN THE QUICKFIST.

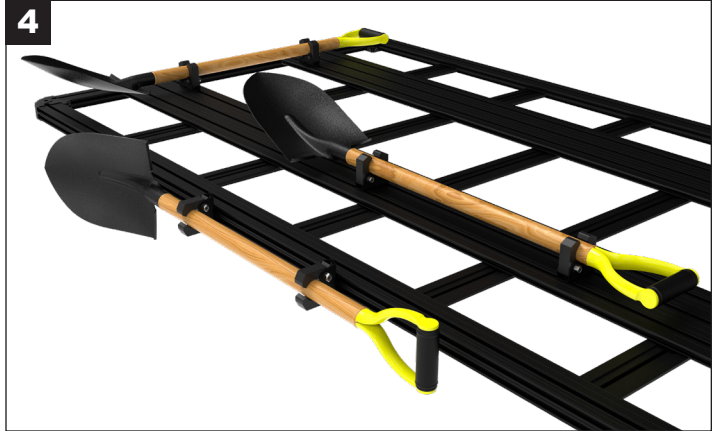

THE UNIVERSAL QUICKFIST BRACKET (92509) CAN EITHER BE TOP MOUNTED OR SIDE MOUNTED.



THE 45 DEGREE BRACKET (92508) IS DESIGNED TO BE MOUNTED ON THE SIDE EXTRUSION.

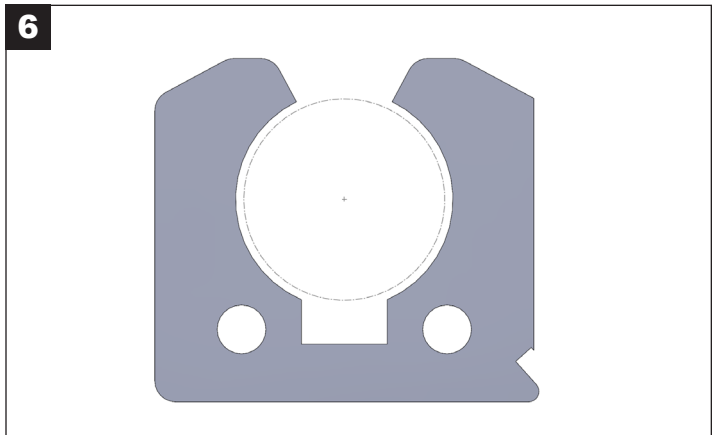

QUICKFIST #10010 HAS A MOUNTING RANGE OF 1-2.25" IN DIAMETER. PLEASE VERIFY FITMENT FOR YOUR APPLICATION.