



ADVENTURE
FURTHER®



RTT MOUNT
PL1
92510 | 59-00292IM

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.



TOOLS NEEDED: 13MM RATCHETING WRENCH, METRIC SOCKET SET

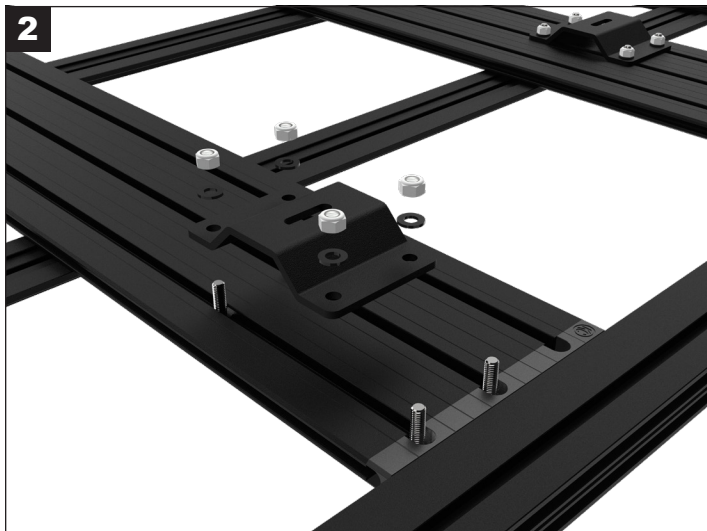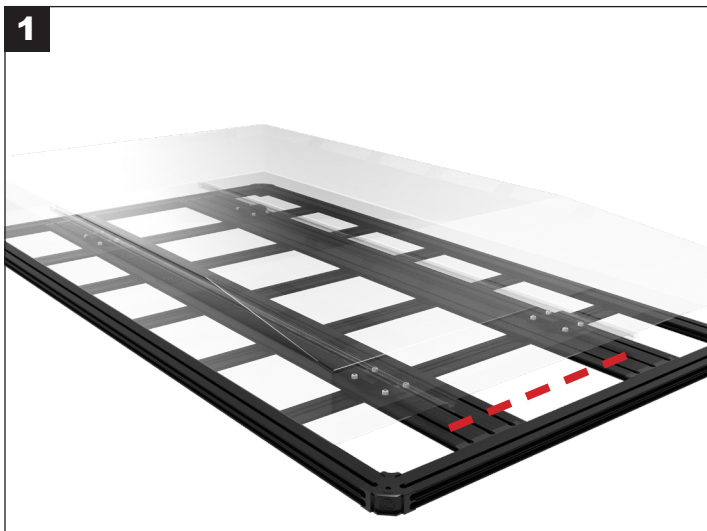

VERIFY THAT THESE BRACKETS WILL WORK FOR YOUR TENT APPLICATION FIRST. YOU WILL NEED TO MEASURE THE WIDTH OF YOUR TENT MOUNTING RAILS, AND SPACE YOUR TWO UPPER DECK EXTRUSIONS ACCORDINGLY. THE SLOTS WILL ACCEPT UP TO M8 HARDWARE.

ONCE YOUR UPPER DECK EXTRUSIONS HAVE BEEN ROUGHLY POSITIONED, DROP IN THE INCLUDED M8 HARDWARE INTO THE RAIL AND LOCATE YOUR BRACKETS.

INSTALLATION INSTRUCTIONS



3 HAND TIGHTEN ALL HARDWARE SO IT IS ABLE TO SLIDE INSIDE OF THE RAIL. POSITION BRACKETS ACCORDINGLY FOR YOUR APPLICATION. PLACE THE TENT INTO POSITION.



4 WITH THE TENT IN POSITION AND ALL HARDWARE LOCATED, TIGHTEN ALL HARDWARE TO SPEC. DOUBLE CHECK TO MAKE SURE THAT THE TENT IS PROPERLY FASTENED.

