Wiring Instructions for the

KC 9560/9560B 12v or KC 9560A/9560C 24v HID Harness
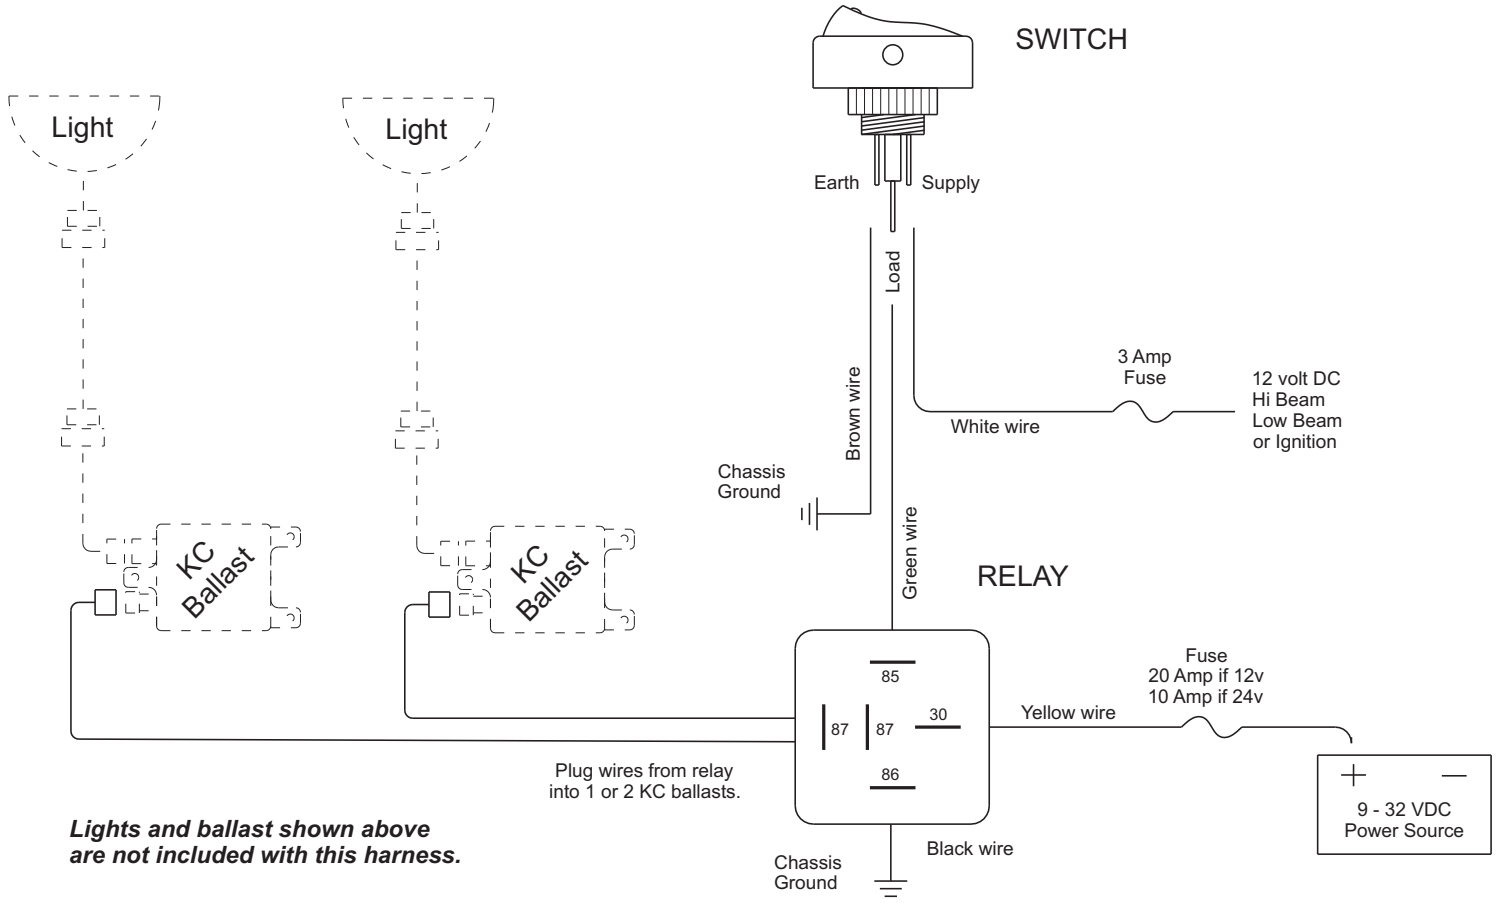
1. Unplug any power wires that you currently have connected to your existing ballasts. If you do not have any power wires connected, just plug in the wires coming from the relay on your new harness.
2. Attach the black wire on the relay to chassis ground.
3. Attach the yellow wire to a 12/24V power source (depending on the voltage of your vehicle).
4. Attach the white wire as indicated in drawing.
5. Attach the brown wire to chassis ground.